

## I-Button of SA200 – Function List

Update Date: 2017/03/10

### ● I-Button Function List:

Function	Description	Data Length / Range		Default
Prefix	Leading code	7 bytes		None
Postfix	Ending code	7 bytes		None
Delimiter	The ending CR or Tab ...	1 bytes	'0' – None '1' – CR '2' – LF '3' – CR+LF '4' – TAB	None
OnRemove	Trigger code when removed	7 bytes		None
From characters	Start transmit position of I-button data	1 bytes	01 ~ 16	<01>hex
To the characters	End transmit position of I-button data	1 bytes	01 ~ 16	<10>hex
Interface setting	Interface selection	1 bytes	'1' – KB '2' – VirtualCom	

PS. Before firmware v0.2

Function	Description	Data Length / Range		Default
Prefix	Leading code	<b>16</b> bytes		None
Postfix	Ending code	<b>16</b> bytes		None
Delimiter	The ending CR or Tab ...	1 bytes	'0' – None '1' – CR '2' – LF '3' – CR+LF '4' – TAB	None
OnRemove	Trigger code when removed	<b>16</b> bytes		None
From characters	Start transmit position of I-button data	1 bytes	01 ~ 16	<01>hex
To the characters	End transmit position of I-button data	1 bytes	01 ~ 16	<10>hex
Interface setting	Interface selection	1 bytes	'1' – KB '2' – VirtualCom	

PS. After firmware v0.3